

## Xtend-a-Mount™ mounting bracket User Guide

For use with Xtend-a-View™ Pro Standard and  
Olympus Camedia™ (including 5050) and 2100 and Kodak® DC4800™  
Cameras



Congratulations on your purchase of the Xtend-a-Mount from Williams & Associates. It was designed specifically for use with the award-winning Xtend-a-View Pro Standard and one of the following cameras: Kodak DC4800, Olympus Camedia, Olympus 2100, and Olympus 5050.

### Description

The Xtend-a-Mount is a rugged, precision device that is machined from aluminum and is anodized for longevity. While the shapes of the Xtend-a-Mount versions are slightly different, the instructions for installation are the same. Check the outline below to ensure you have the correct model for your camera.

### What's included in this package?

You should have received:

- One Xtend-a-Mount, including tripod mounting screw (rubber strip is pre-installed)
- A small plastic envelope containing this User Guide, two steel studs, a piece of Velcro, and two pieces of brown magnetic material.

**Important note: the magnetic material CAN affect credit cards and other magnetic materials.**

If you are missing any of these items, contact Williams & Associates for replacement.

### Installing Velcro around the face of the Viewer

In order to 1) ensure a firm fit of the viewer/mount assembly to your camera's LCD and 2) provide a light-tight connection between the viewer and the LCD, it's important to put Velcro around the viewer face. Follow the instructions given in the Xtend-a-View Pro User Guide on installing the Velcro. If you haven't installed the Velcro previously, it's recommended that you install the softer "loop" type Velcro. It's a bit more compressible, and it makes a somewhat tighter fit.

### Xtend-a-Mount Assembly


#### • Steel Studs

Screw each steel stud from the top of the Xtend-a-Mount into one of the two holes and tighten "finger tight". **Do not over-tighten.** Test the alignment

of the Xtend-a-View by simply placing the holes of the viewer over the two studs, and allowing the viewer to slide to the plate.

#### • Viewer Mounting

You can either install Velcro OR magnetic material in the outline area (shown in the diagram). Remove the backing from ONE half of either the Velcro or magnetic material, and press it firmly into place. Remove the remaining backing material and then slide the viewer over the two studs and press firmly into place.

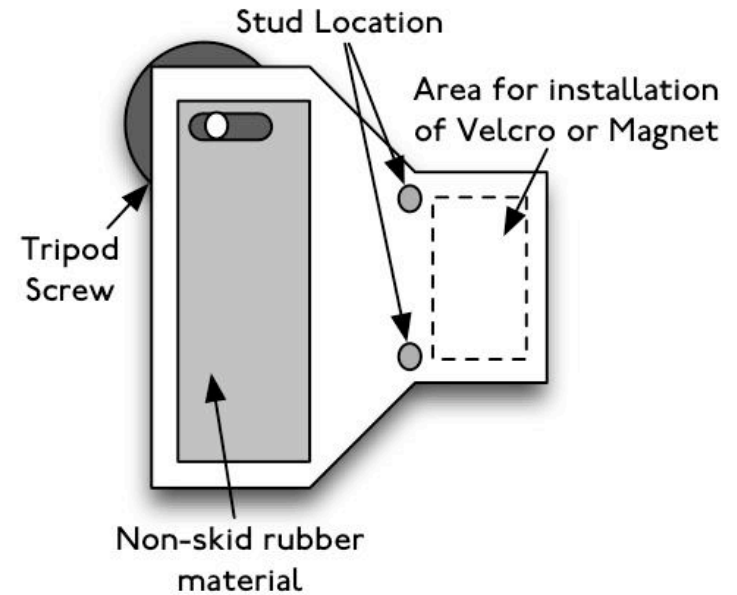

### Attach the viewer and mount to your camera

Orient the unit on your camera and attach with the Tripod screw. Press the front of the Viewer up to the LCD monitor, checking for alignment and then tighten the Tripod screw. At this point the Xtend-a-View Pro/Xtend-a-Mount combination is ready for use.

### Warranty

Your Xtend-a-Mount™ is warranted to be free of manufacturing defects for a period of 90 days. If during that time, the unit becomes defective, it should be returned to the place of purchase for replacement. The manufacturer reserves the right to repair or replace defective units. Units that are still under warranty that are damaged through misuse will not be repaired or replaced under warranty. Units out of warranty will be repaired or replaced at a nominal fee by the manufacturer. Contact the manufacturer to arrange return and repair. Thank you for your purchase of Xtend-a-Mount. We hope that it will provide you years of satisfaction, and enjoyment. Capture the moment.

See all the fine Xtend-a-System™ products at: <http://www.photosolve.com>

©1999-2003 Williams & Associates

These materials may not be copied, reproduced in whole or in part without direct permission from Williams & Associates

Xtend-a-View and Xtend-a-Mount are trademarks of Williams & Associates  
All other trademarks are the property of their respective companies